

F2

Bind-it-All V2.0: Extension Bar Locking Lever Replacement Instructions.

Although it is not very common customers have encountered breakage of the Extension Bar Locking Levers. This is due to mishandling during shipping and transit. After requesting replacement parts, please follow these instructions for replacement.

Two things to keep in mind: It is important to note that there are two different locking levers for the extension bar mechanism. One specifically for the left side and one specifically for the right side. (F1 and F2)



F1



Corresponds to the left side of machine (side with trash compartment door)

Corresponds to right side of machine (side with paper stop guide)

You will note that on F1 the lever corresponding to the right side has the flat internal area at the top of the picture shown. You will note that on F2 the flat part corresponding to the left side has the flat internal area on the left hand side of the picture shown.

In order to replace either one of these locking levers you must first entirely remove the Extension Paper Guide Bar. (F3)

When replacing the right side lever (the side with the paper stop guide) take the right side lever (F4) in a vertical position and install it onto the receiving shaft. (F5).

Continue pressing in the lever (F6, F7) all the way in until it rests against the body/casing of the Bind-it-All.



F4



F5



F6



F7

When replacing the left side lever (F8) (the side with the trash compartment door) you must first remember to remove the Extension Bar Guide. You will then take the left side lever (F9) in a vertical position and install it onto the receiving shaft (F10). Continue pressing the lever (F11, F12) all the way until it rests against the body/casing of the Bind-it-All.



F8



F9



F10



F11



F12

For further questions please contact Zutter Innovative at Tel: (949) 643-9526, Fax: (949) 643-9597, e-mail binditall@aol.com.

Issued November 2008.