

Round-it-All Repair

If your Round-it-All is stuck in the pressed down position (jammed) and the top handle is loose without any spring action.....

....the easiest and swiftest solution is to simply tap your Round-it-All against a soft edge such as shown on picture "A" where you see a plastic trash can. You can hit the Round-it-All a few times against the soft edge, using some force as necessary. This may very well cause it to release.

If this step does not work proceed with the following.

1. As shown, take a small screwdriver and carefully remove the bottom waste compartment cover.
2. Note as the picture shows the Round-it-All with the waste compartment removed.
3. As shown, take a small screwdriver and place it onto the center part of the cutting blade by pushing it inward. This will most likely make the blade pop back into its proper and open position.



4. Very similar to picture 3, place a small screwdriver onto the middle of the cutting blade. Pushing the screwdriver down will force it to pop back up into its open and proper position.

5. Replace the waste compartment lid.




6. With some minor pressure, the waste compartment lid will go back into place.

If the above instructions are not successful, please try the following:

Round-it-All Repair #2

Repair instructions above indicate to press against the blade with a small tool, such as a screwdriver. It is possible that the blade will not release due to an extremely tight jam. If that is the case, please try the following:


After removing the lid from the waste compartment, hold the unit upside down, grabbing it from the lower handle (**F1**). You will note that the bottom handle of the Round-it-All drops (due to gravity and not from spring action). Use a tool such as a wooden spoon or spatula (**F2**) and with a good amount of force (don't worry about being too strong, hit it hard!), hit the Round-it-All blade with the wooden tool. (**F3**). In most instances where the blade is harder to release, this will in fact push the blade back to its proper position.

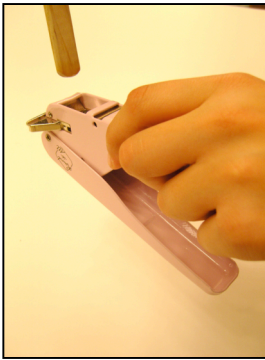

F1



F2

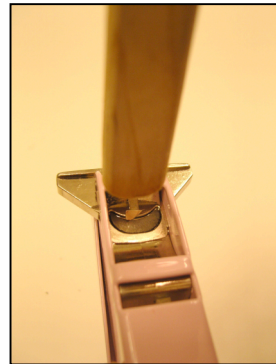

F3

If the Round-it-All isn't cutting cleanly...

Please note that the Round-it-All is mainly designed for thick materials. If you are going to use it with thin paper, it is recommended that you punch a thick group of them at one time.

When using photographs: photography paper contains a glossy layer of thin plastic. It is recommended that if using photographs, you round off a group of photos at the same time, facing up and adding a sheet of cardstock at the top of the stack.

Cleaning the Round-it-All...

Recommendation: Take a lunch bag and fold it several times (to acquire many corners) repeatedly rounding off corners in an effort to clean out the first bit of grease that may be on the machine from the manufacturing process. This is important to avoid any kind of grease marks on any of your projects.

Should you have any further questions please contact Zutter Innovative Products at: Tel: (949) 643-9526 Fax: (949) 643-9597 / email: binditall@aol.com

Issued: November 2008

This information is provided as a service to users of our products. Information may be copied and distributed by craft stores and instructors for educational use.
Copyright 2008. Zutter Innovative Products.